


A4-PG-Picket Gate

Adjustable Gate Installation Guide

Shop Drawing

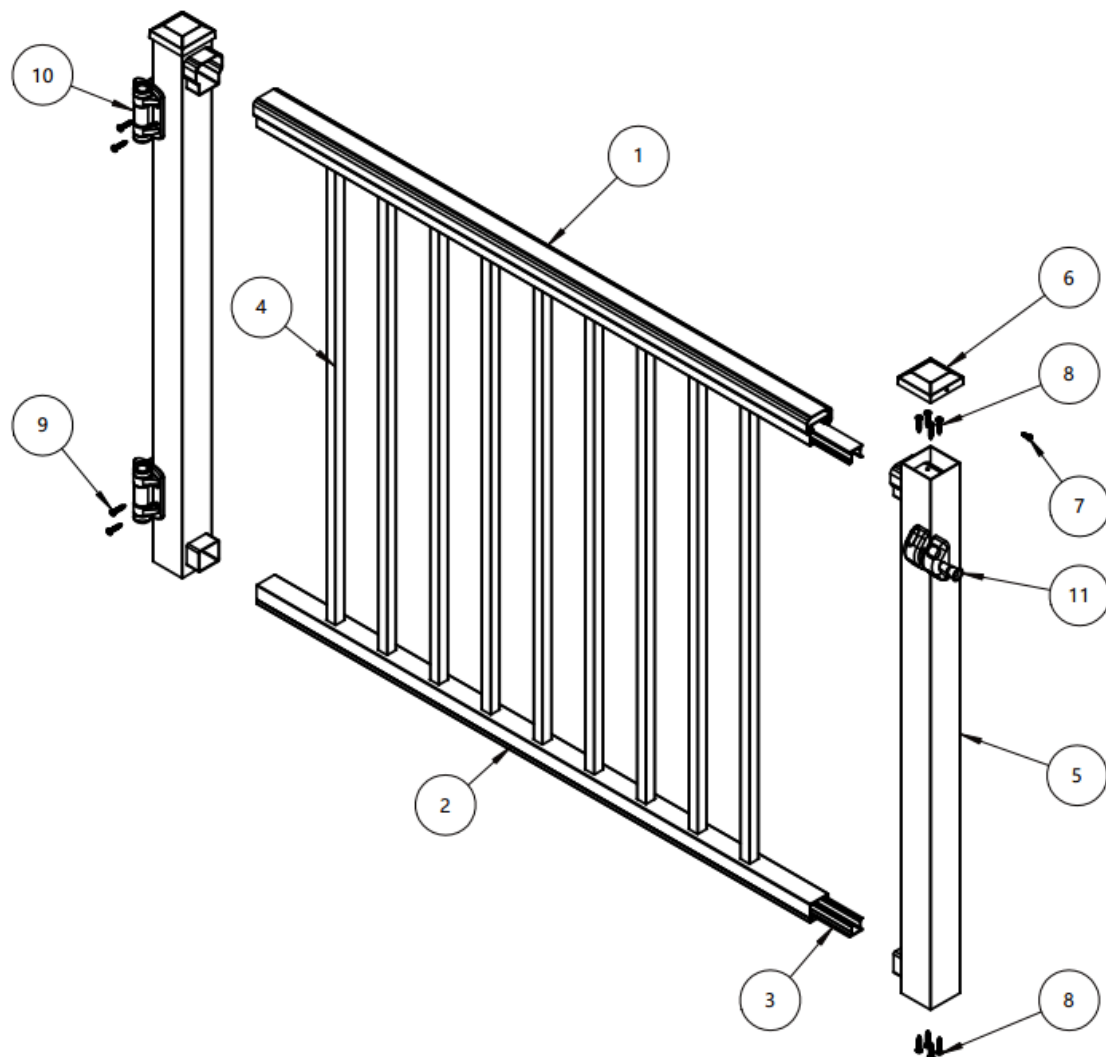

Parts List


NO.	ITEM	LENGTH(MM)	QTY
1	Top rail	1176	1
2	Bottom rail	1176	1
3	Vinyl insert	1174	2
4	3/4" Pickets	886	9
5	2.5" Post & brace	976.2	2
6	2.5" Post cap		2
7	#8 5/8" PAN head screw (Post cap to post)		2
8	#10 1" PAN head screw (Post bracket to rail)		16
9	#10 1.25" PAN head screw (Hinge&Latch to post)		20
10	Hinge		2
11	Latch		1

A4-PG-Picket Gate


Adjustable Gate Installation Guide

Standard Width Gate


1. Insert pickets into top and bottom rails, the rails are pre-assembled with vinyl inserts.

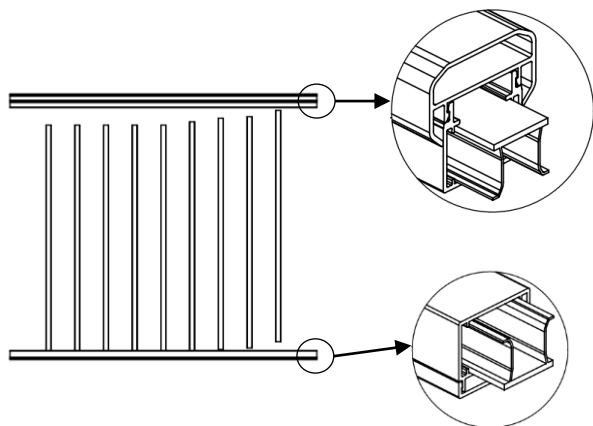


2. Slide the section into the brackets, and secure the top and bottom rails with the brackets by #10-1" screws.

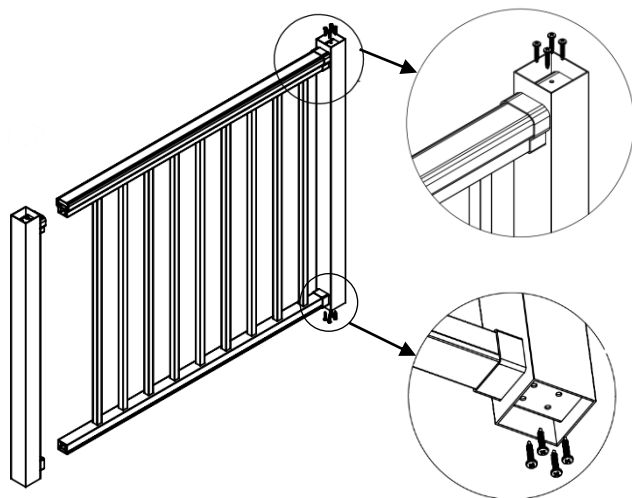

3. Install the post caps and secure the caps by #8-5/8" screws.

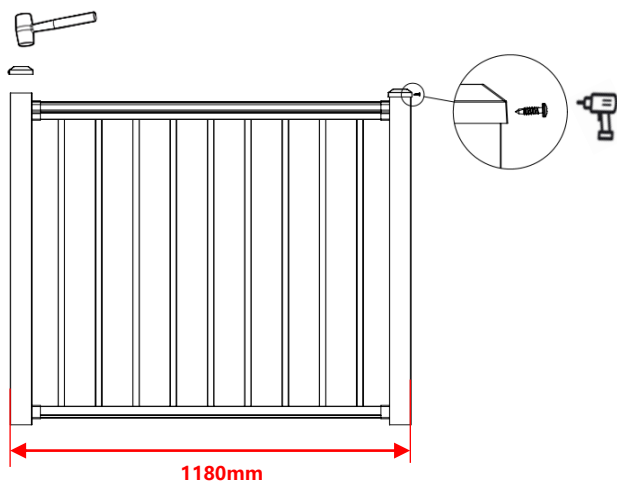

4. Distance between the posts of the railings is 20mm longer than the length of the gate for installing the hinges and latch. Install the hinges and latch. Ensure the distances from top of the hinge to top rail, from bottom of the hinge to bottom rail and from top of the latch to top rail are as the measurements below.

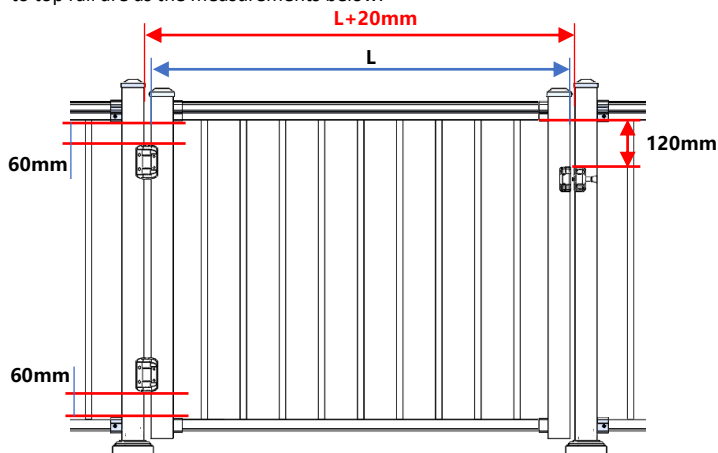

Adjustable Width and Height Gate

1. When the width of the gate to be installed is small, the top rail and bottom rail need to be cut to ensure that the gap between the left and right pickets and the posts is the same and less than 4in.

